



Love Brewing

Make Yourself at Home

Spiritworks Alcometer


User Instructions

(0 - 100% ABV)


Drop into the "distilled" liquid and read across the liquid line to give the % ABV. Alcohol should be at 20deg C for accurate results.

Please note this product only works on distilled liquid. It will not produce accurate results on a fermented liquid (like a wash). More accurate spirit alcometers are available from Love Brewing showing tighter alcohol range (0-35, 35-70, 70 to 100 ABV).

The accuracy of this product is not suited for submitting samples to Customs & Excise Department.

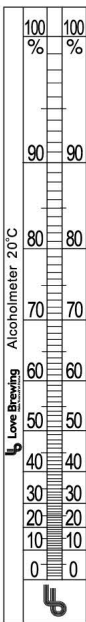

Visit lovebrewing.co.uk

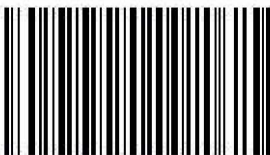

90001292